



**JUPITER AVIONICS**  
C O R P O R A T I O N

**wi JAC<sup>2</sup>-T32 (JB66/JB67)**

**Wireless Intercom System with  
Transceiver Connection - 3 User - Europe**



## Operating Manual

Rev C

**Jupiter Avionics Corporation**  
1959 Kirschner Road  
Kelowna BC  
Canada V1Y 4N7  
Tel: +1 778 478 2232  
Toll-Free: 1 855 478 2232  
[www.jupiteravionics.com](http://www.jupiteravionics.com)



**Copyright 2021 Jupiter Avionics Corp.  
All rights reserved**

 
Jupiter Avionics Corporation (JAC) permits a single copy of this manual to be printed or downloaded for the express use of an installing agency. Any such electronic or printed copy of this manual must contain the complete text of this copyright notice. Any unauthorized commercial distribution of this manual is strictly prohibited. Except as described above, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded, or stored in any storage medium for any purpose without the express prior written consent of JAC.

**IMPORTANT:**

Information in this document is subject to change without notice.  
To confirm the current revision status of this manual, visit the JAC website:  
[www.jupiteravionics.com](http://www.jupiteravionics.com)

[illegible]

|           |  |   |
|-----------|--|---|
| Prepared: | Checked:   | Approved:   |
| MPB       | <br>JAC<br>02-28-24<br>MB | <br>JAC<br>02-28-24<br>KDV |




## **Table of Contents**

|          |  |           |
|----------|--|-----------|
| <b>1</b> | <b>Introduction .....</b>                                    | <b>1</b>  |
| 1.1      | Unpacking .....  | 1         |
| 1.2      | Verify Operating Region .....                                | 1         |
| 1.3      | Verify Pairing Registration Number .....                     | 2         |
| <b>2</b> | <b>The wiJAC2-T32 Components .....</b>                       | <b>2</b>  |
| 2.1      | JB66-002 Headset Adapter (JB66) .....                        | 3         |
| 2.1.1    | JB66 Controls .....  | 3         |
| 2.1.2    | JB66 Connectors .....  | 4         |
| 2.1.3    | JB66 Annunciators .....                                      | 4         |
| 2.1.4    | JB66 Internal Adjustments, Annunciators and Connectors ..... | 5         |
| 2.2      | JB67-002 Intercom Adapter (JB67) .....                       | 6         |
| 2.2.1    | JB67 Controls .....  | 6         |
| 2.2.2    | JB67 Connectors .....  | 6         |
| 2.2.3    | JB67 Annunciators .....                                      | 6         |
| 2.2.4    | JB67 Internal Adjustments, Annunciators and Connectors ..... | 7         |
| 2.3      | Other Features (Both units) .....                            | 8         |
| 2.3.1    | Battery Lid Release .....                                    | 8         |
| 2.3.2    | Belt Clip .....  | 8         |
| 2.4      | Batteries (for both JB66 and JB67) .....                     | 9         |
| 2.4.1    | Inserting or Replacing the Batteries .....                   | 9         |
| 2.4.2    | Charging Batteries in the Unit .....                         | 9         |
| 2.4.3    | Charging Operation – via Battery Charger .....               | 9         |
| 2.4.4    | Rechargeable Battery Kit .....                               | 10        |
| 2.4.5    | Battery Cautions and Warnings .....                          | 10        |
| <b>3</b> | <b>Connecting the wiJAC2™ System .....</b>                   | <b>11</b> |
| 3.1      | wiJAC2-T32 System with a Transceiver .....                   | 12        |
| 3.2      | wiJAC2-T32 System connected to Aircraft Audio System .....   | 13        |
| 3.3      | wiJAC2™ Set-up and Connection .....                          | 14        |
| 3.3.1    | Insert Batteries .....                                       | 14        |
| 3.3.2    | Attach Connectors to Aircraft and Headset .....              | 14        |
| 3.3.3    | Turn On Adapters and Verify Connection .....                 | 14        |
| 3.3.4    | Verify Audio Operation .....                                 | 14        |
| 3.4      | wiJAC2™ Adjustments and Pairing .....                        | 15        |
| 3.4.1    | Pairing Process .....  | 15        |
| 3.4.2    | Purging Process .....  | 16        |
| <b>4</b> | <b>wiJAC2™ System Operation .....</b>                        | <b>17</b> |
| 4.1      | Overview .....   | 17        |
| 4.1.1    | Listening Operation .....                                    | 17        |
| 4.1.2    | VOX Speaking Operation .....                                 | 17        |
| 4.1.3    | ICS PTT Speaking Operation .....                             | 17        |
| 4.1.4    | Live Speaking Operation .....                                | 17        |
| 4.1.5    | Low Battery Warning .....                                    | 17        |
| 4.1.6    | Operation during Charging .....                              | 17        |
| 4.1.7    | Loss of Audio .....  | 17        |
| 4.1.8    | Battery Life .....   | 18        |

## 1 Introduction

This manual contains the operating instructions for the wiJAC2-T32 Wireless Intercom System with Transceiver Connection - 3 User - Europe.

The diagram below describes the naming method for the different systems.

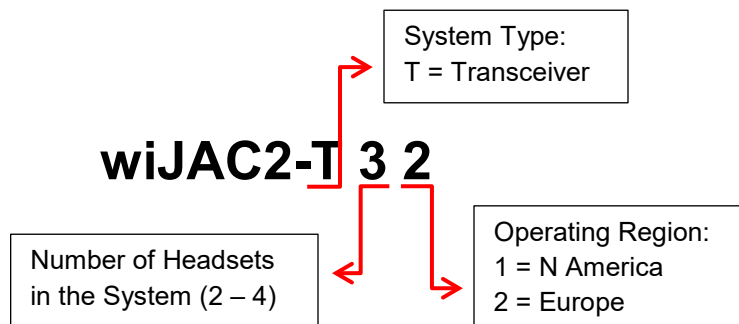

The **wiJAC2-T32** consists of up to three JB66-002 Wireless Aircraft Headset Adapters, and one JB67-002 Wireless Aircraft Intercom adapter.

RF output power is 23 dBm (200 mW peak)

|                     |                  |                  |
|---------------------|------------------|------------------|
| Channel frequencies | 9 = 1.881792 GHz | 4 = 1.890432 GHz |
|                     | 8 = 1.883520 GHz | 3 = 1.893888 GHz |
|                     | 7 = 1.885248 GHz | 2 = 1.896616 GHz |
|                     | 6 = 1.886976 GHz | 1 = 1.895616 GHz |
|                     | 5 = 1.888704 GHz | 0 = 1.897344 GHz |

Only paired units will operate together (see [section 1.3](#))

System operating information is in [section 4](#).



**WARNING:** JAC recommends that no battery-operated device should be relied upon as the sole method of communication in cases where there is potential risk to life or limb.

### 1.1 Unpacking

Unpack the **wiJAC2™** box carefully, and ensure that it contains the following:

- three ea. Wireless Aircraft Headset Adapter, JAC P/N JB66-002
- one ea. Wireless Aircraft Intercom Adapter, JAC P/N JB67-002
- three ea. Headset Adapter Cable, JAC P/N CAB-HSET-0001
- one ea. Audio Panel Intercom Adapter Cable (10pin Hirose plug to U174 plug), JAC P/N CAB-WJ2-0004
- one ea. **wiJAC2-T32** User Quick Start Guide, JAC P/N DOC-GUID-WI2TX2

### 1.2 Verify Operating Region

The **wiJAC2-T32** Wireless Intercom System operates using radio frequencies that are authorized by government regulatory agencies. Ensure the region in which you are operating the units matches the region marked on a label on the back of each unit.



### **1.3 Verify Pairing Registration Number**

The **wiJAC2-T32** Wireless Intercom Dropcord System consists of one JB66-002 Headset Adapter and up to three JB67-002 Intercom Adapters. Only paired units will operate together.

Refer to the Pairing Instructions in [section 3.4.1](#).

## **2 The wiJAC2-T32 Components**




The main components of the wiJAC2-T32 are three JB66-002 Headset Adapters and the JB67-002 Intercom Adapter.

The headset is not included.






## 2.1 JB66-002 Headset Adapter (JB66)

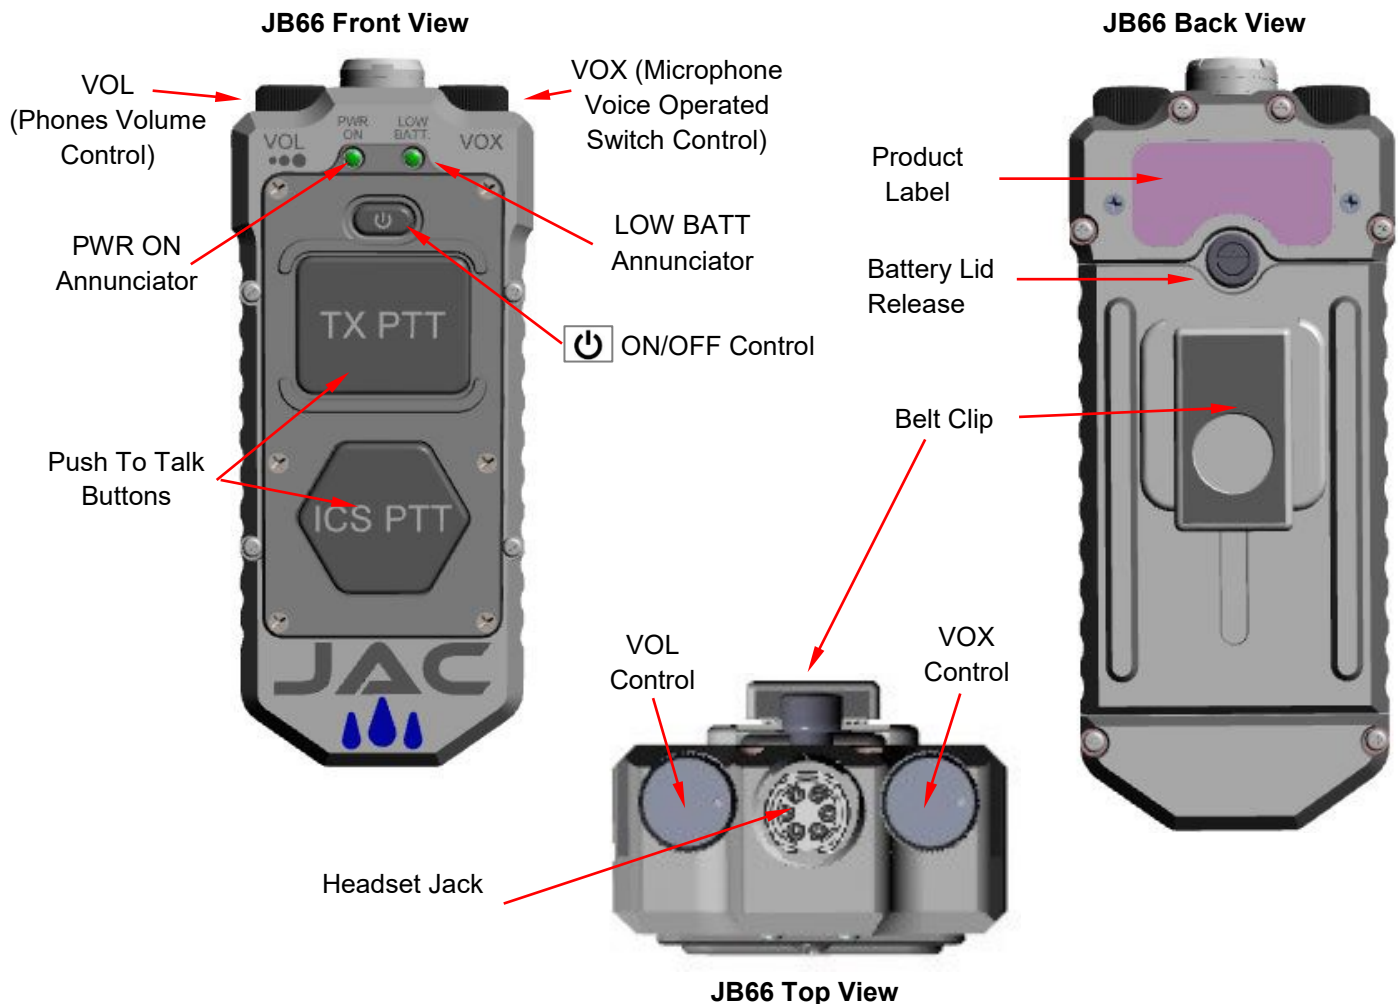

**Note:** The unit is shown in grey for clarity.

### 2.1.1 JB66 Controls
 
#### 2.1.1.1 (ON/OFF) Button

The ON/OFF control is a push button switch marked with the  symbol and is located at the centre top of the unit front. To turn the unit on, press the ON/OFF button once. The PWR ON annunciator will illuminate green, and the LOW BATT annunciator will illuminate for two seconds as the JB66 starts searching for a paired JB67.

To turn the unit off, press and hold the ON/OFF button for approximately 3 seconds. (The PWR ON annunciator will turn off and the LOW BATT annunciator will illuminate red and then turn off as the JB66 turns off, or when the ON/OFF button is released.)

#### 2.1.1.2 VOX (Voice Operated Switch)

The Voice Operated Switch control is a rotary knob marked VOX located on the top right of the JB66 Headset Adapter. To reduce the level of the sound needed to route the microphone audio to the Intercom Adapter, turn the VOX knob counterclockwise (ccw). To increase the level of the sound needed to route the microphone audio to the Intercom Adapter, turn the VOX knob clockwise (cw). When the control is at the detent in the fully ccw position, the unit will be in PTT ICS mode. Adjust this setting for proper VOX operation as ambient noise levels change.



#### 2.1.1.3 VOL (Phones Volume Control)



**WARNING:** Loud noise can cause hearing damage. Before using the headset, set the volume to minimum, and then slowly increase it to a comfortable listening level.

The volume control is a rotary knob marked VOL (volume) located on the top left of the JB66 Headset Adapter. To reduce the volume of the audio heard in the headset, rotate the VOL knob counterclockwise. To increase the volume of the audio heard in the headset, rotate the VOL knob clockwise.

#### 2.1.1.4 TX PTT (Push To Talk) Button

The Transmit Push To Talk button is a square push button switch marked TX PTT on the lower front of the JB66 Headset Adapter. When the TX PTT button is pressed and held, microphone audio is routed to the Intercom Adapter and the TX Key output is also activated.

This is the user's Transmit 'Push To Talk' (TX PTT) button. While this button is pressed, the **wiJAC2™** system will allow the user to transmit on the transceiver selected on the audio controller. If the TX PTT button is used, the VOX threshold will be overridden (see section 2.1.1.2 above).

While the TX PTT button is pressed, all other linked JB66 Headset Adapters are prevented from transmitting.

#### 2.1.1.5 ICS PTT (Push To Talk) Button

The intercom Push To Talk button is a hexagonal push button switch marked ICS PTT located on the upper front of the JB66 Headset Adapter. When the ICS PTT button is pressed and held, the VOX threshold is overridden, microphone audio is routed to the paired Intercom Adapter, and the ICS Key output is also activated.

### 2.1.2 JB66 Connectors

#### 2.1.2.1 Headset Jack

The headset jack is a 4-pole TJT-120 jack on the top of the JB66 headset adapter. An appropriate mating headset connector can be inserted directly into the jack (see [section 3.3.2.1](#) for adapter cables).

### 2.1.3 JB66 Annunciators

#### 2.1.3.1 PWR ON (Power On)

The power on (PWR ON) annunciator is a green LED located on the front left of the unit.

- When a unit is turned on, the PWR ON annunciator will illuminate for 2 seconds, and the unit will start to search for its paired unit.
- While the unit is searching for its paired unit the PWR ON annunciator will triple-flash every 1.5 seconds.
- When the unit is connecting to its paired unit, the annunciator will double-flash every 1.5 s until connection is established,
- After connection, the annunciator will illuminate steady green until the unit is turned off.

#### 2.1.3.2 LOW BATT (Low Battery Warning)

The low battery (LOW BATT) warning annunciator is a red LED located on the front right of the unit. When the unit is turned on, the LOW BATT annunciator will illuminate for 2 seconds.

When the JB66 battery voltage is low the LOW BATT annunciator will flash once every 1.5 s and output a low battery notification (a triple beep) in the headphones once every minute until the battery charge reaches critical voltage level. (A similar but higher pitched tone will be heard if the paired JB67 Intercom Adapter battery charge is low.)



**Note:** JAC recommends that the batteries should be charged or replaced immediately if the LOW BATT warning illuminates during use.

When the unit battery charge is less than or equal to the critical battery voltage, the unit will turn off.




## 2.1.4 JB66 Internal Adjustments, Annunciators and Connectors

To reveal the internal adjustments, annunciators and connectors, remove the battery cover by unfastening the thumbscrew on the rear of the unit and raising the top of the cover until it can be lifted clear of the retaining tabs.



**CAUTION:** To prevent potential damage or loss of function, the internal adjustments, controls and CONFIG port should **only** be used at initial set up. Contact your installing agency for any required changes.

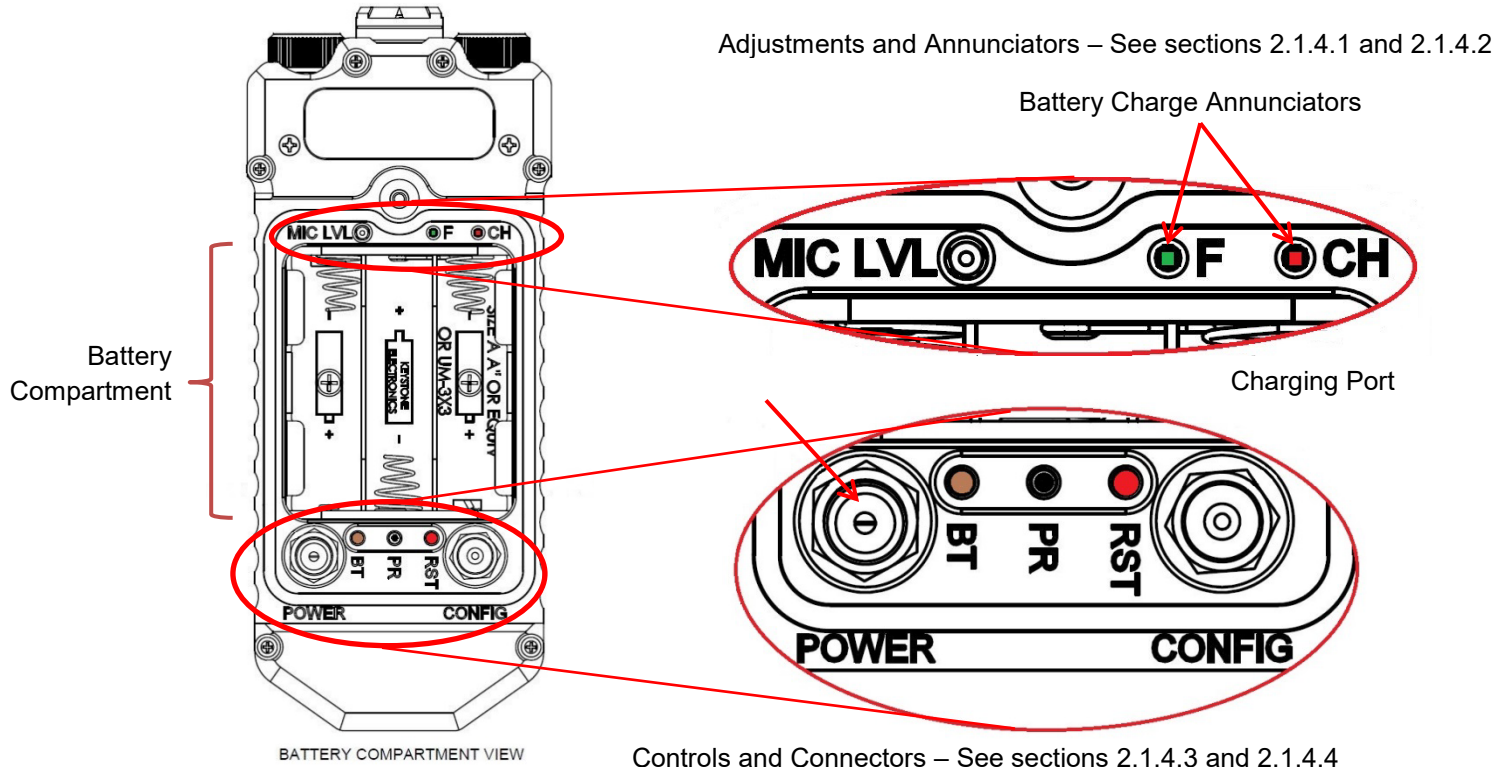

Adjustments and Annunciators – See sections 2.1.4.1 and 2.1.4.2

Battery Charge Annunciators

Charging Port

Controls and Connectors – See sections 2.1.4.3 and 2.1.4.4

### 2.1.4.1 Adjustments

The MIC INPUT signal (**MIC LVL**) should only be adjusted by qualified technical personnel.

### 2.1.4.2 Annunciators

#### Battery Charge

The JB66 Battery Charge annunciators are two LEDs at the top right of the battery compartment.

The Charging annunciator (**CH**) is a red LED that will illuminate when the batteries are being charged at the maximum charge current, and the Full Charge (**F**) annunciator is a green LED that will illuminate when the batteries are fully charged.

### 2.1.4.3 Controls

These buttons are recessed to prevent accidental activation. The Boot (**BT**) and Reset (**RST**) buttons should only be activated by qualified technical personnel.

### 2.1.4.4 Connectors

#### POWER (Charging Port)

The Charging Port (marked **POWER**) is a 2.1 mm coaxial jack on the bottom left side of the battery compartment. To charge NiMH batteries, connect a USB (Universal Serial Bus) to Type M 2.1mm Plug from the Charging Port to a USB power source.


#### CONFIG (Mode Select)

The Configuration Port (marked **CONFIG**) on the bottom right side of the battery compartment is for factory use only.






## 2.2 JB67-002 Intercom Adapter (JB67)

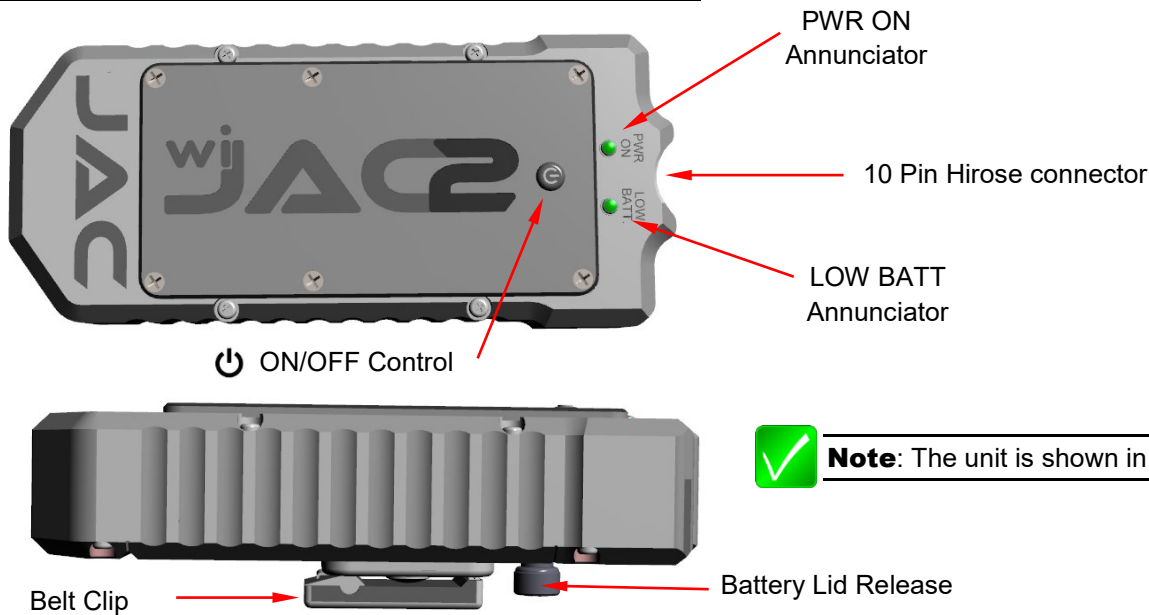

**Note:** The unit is shown in grey for clarity.

### 2.2.1 JB67 Controls

#### 2.2.1.1 (ON/OFF) Button

The ON/OFF control is a push button switch marked with the  symbol and located at the front centre top of both units. To turn the unit on, press the ON/OFF button once. The PWR ON annunciator will illuminate green, and the LOW BATT annunciator will illuminate for two seconds as the units start to search for a paired JB66.

To turn the unit off, press and hold the ON/OFF button for approximately 3 seconds. (The PWR ON annunciator will turn off and the LOW BATT annunciator will illuminate red and then turn off as the unit turns off, or when the ON/OFF button is released.)

### 2.2.2 JB67 Connectors

#### 2.2.2.1 Intercom Connector

The headset jack is a 10 pin Hirose jack on the top of the JB67 intercom adapter, for use with a U-174/U or U93A/U type intercom plug (see [section 3.3.2.1](#) for adapter cables).

### 2.2.3 JB67 Annunciators

#### 2.2.3.1 PWR ON (Power On)

The power on (PWR ON) annunciator is a green LED located on the front left of the unit.

- When a unit is turned on, the PWR ON annunciator will illuminate for 2 seconds, and the unit will start to search for its paired unit.
- While the unit is searching for its paired unit the PWR ON annunciator will triple-flash every 1.5 seconds.
- When the unit is connecting to its paired unit, the annunciator will double-flash every 1.5 s until connection is established,
- After connection, the annunciator will illuminate steady green until the unit is turned off.

#### 2.2.3.2 LOW BATT (Low Battery Warning)

The low battery (LOW BATT) warning annunciator is a red LED located on the front right of the unit. When the unit is turned on, the LOW BATT annunciator will illuminate for 2 seconds.



When the JB67 battery voltage is low the LOW BATT annunciator will flash once every 1.5 s and output a low battery notification (a triple beep) in the headphones once every minute until the battery charge reaches critical voltage level. (A similar but lower pitched tone will be heard if the paired JB66 Headset Adapter battery charge is low.)



**Note:** JAC recommends that the batteries should be charged or replaced immediately when the LOW BATT warning illuminates during use.


When the unit battery charge is less than or equal to the critical battery voltage, the unit will turn off.

## 2.2.4 JB67 Internal Adjustments, Annunciators and Connectors

To reveal the internal adjustments, annunciators and connectors in the battery compartment, remove the battery cover by unfastening the thumbscrew on the rear of the unit and raising the top of the cover until it can be lifted clear of the retaining tabs.



**CAUTION:** To prevent potential damage or loss of function, the internal adjustments, controls and CONFIG port (*information italicized*) should **only** be used by qualified technical personnel. Contact your installing agency for any required changes.

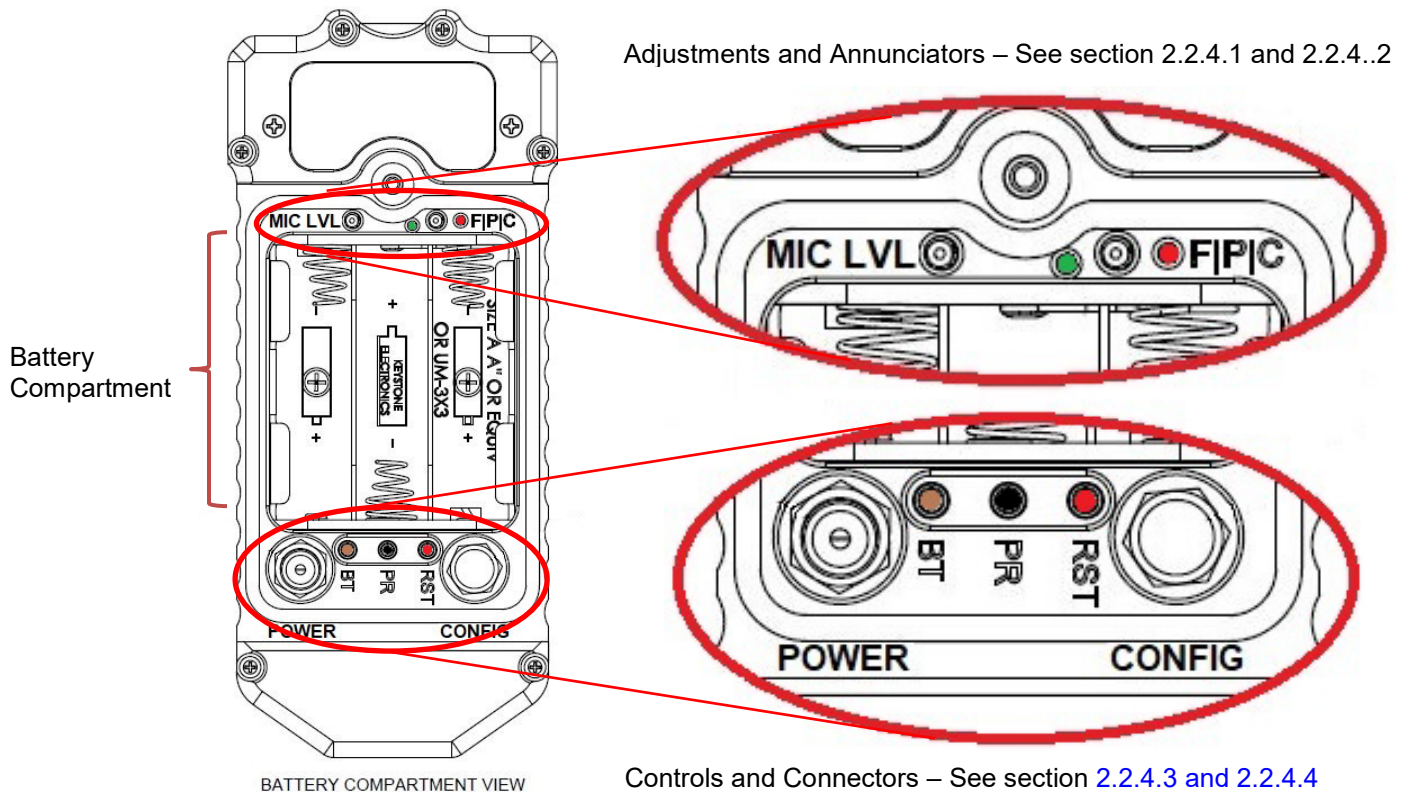

### 2.2.4.1 Adjustments

The MIC INPUT signal (**MIC LVL**) and Phones Level signal (**P**) should only be adjusted by qualified technical personnel.

### 2.2.4.2 Annunciators

#### Battery Charge

The JB67 Battery Charge annunciators are two LEDs at the top right of the battery compartment.

The Charging annunciator (**C**) is a red LED that will illuminate when the batteries are being charged at the maximum charge current, and the Full Charge (**F**) annunciator is a green LED that will illuminate when the batteries are fully charged.



#### 2.2.4.3 Controls

*These buttons are recessed to prevent accidental activation. The Boot (**BT**) and Reset (**RST**) buttons should only be adjusted by qualified technical personnel. The Pair (**PR**) button is used during the pairing process (section 3.4.1).*

#### 2.2.4.4 Connectors

##### **POWER** (Charging Port)

The Charging Port (marked **POWER**) is a 2.1 mm coaxial jack on the bottom left side of the battery compartment. To charge NiMH batteries, connect a USB to Type M 2.1 mm Plug from the Charging Port to a USB power source.

##### **CONFIG** (Mode Select)

*The Configuration Port (marked CONFIG) on the bottom right side of the battery compartment is for factory use only.*

### 2.3 Other Features (Both units)

#### 2.3.1 Battery Lid Release

The battery compartment lid release is a thumbscrew on the rear of the unit.

#### 2.3.2 Belt Clip

The belt clip is on the rear of both the JB66 Headset Adapter and the JB67 Intercom Adapter. Ensure that the units are attached securely.



## 2.4 Batteries (for both JB66 and JB67)




**WARNING:** Charging battery types other than NiMH or NiCad may cause the batteries to leak or explode and cause damage or injury. If non-NiMH or non-NiCad batteries are installed, do not connect the Charging Port to a USB power source.

The JB66 and JB67 each require three AA batteries. JAC recommends Duracell 800 mAh (or higher) NiMH or Duracell alkaline batteries for use in the **wiJAC2™** system to obtain the typical battery life.

Removal of the batteries WILL NOT change any internal configuration of the unit.

### 2.4.1 Inserting or Replacing the Batteries

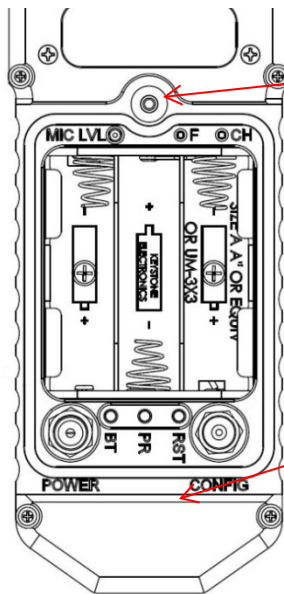

Battery Lid Release

To replace the batteries, remove the battery cover by unfastening the battery lid thumbscrew to release the upper end of the cover, and then gently lift the lid up and away from the body to release the two retaining tabs from the slots.

Remove the batteries and insert new or fully charged batteries, matching the polarity marked on the battery holder.

Retaining tabs

### 2.4.2 Charging Batteries in the Unit

To charge rechargeable batteries in the unit, connect the Charging Port to a USB power source using the USB to 2.1 mm male cable (CAB-USB-0013, see [section 2.4.4](#)). If turned on during charging, the unit draws its power from the charging source, not the batteries, but battery charging will take longer. When charging is complete, the 'Full' annunciator (F) will illuminate green.

It should be possible to charge the unit via most USB power sources but this cannot be guaranteed for any products not made by or purchased from JAC.



**Note:** The batteries will charge whether the JB66/JB67 is switched on or switched off. Battery charging will take longer if the unit is switched on.

### 2.4.3 Charging Operation – via Battery Charger

The batteries may be removed from the unit for charging in a separate battery charger. Removal of the batteries WILL NOT change any internal configuration of the unit.



**Note:** The JB66/JB67 will only charge the batteries when the internal temperature is within 0 to 40 °C



#### 2.4.4 Rechargeable Battery Kit

A rechargeable battery kit is available for this system (JAC P/N INST-JB6X). It contains:

- two ea. USB A Male to Type M 2.1mm Plug USB Connector, 3ft Length, JAC P/N CAB-USB-0013
- six ea. NiMH 2450 mAh Batteries, JAC P/N MSC-BATT-AA2

#### 2.4.5 Battery Cautions and Warnings



---

**CAUTION:** Follow these guidelines to prolong battery life and minimize the risk of unit malfunction.

---

- ⚠ Do not leave battery uncharged for long periods of time.
- ⚠ Do not leave battery charging for extended periods (more than 48 hours)
- ⚠ To ensure that the unit functions correctly, insert the new batteries with the positive and negative poles aligned as indicated in the battery compartment.
- ⚠ When replacing the batteries, use only new or fully charged batteries.
- ⚠ Do not mix old and new batteries as this can cause battery leakage and/or damage to the unit.
- ⚠ Do not mix battery types.



---

**WARNING:** Follow these guidelines to prolong battery life, and minimize the risk of fire, chemical burns, electrolyte leaks and/or injury.

---

- ❗ **FOLLOW** the manufacturer's instructions for care and disposal of batteries.
- ❗ **DO NOT** use sharp objects to remove the batteries.
- ❗ **DO NOT** disassemble, puncture, burn or in any other way damage the batteries.
- ❗ **DO NOT** let children handle the batteries.
- ❗ **USE ONLY** approved battery chargers.
- ❗ **USE ONLY** approved replacement batteries.





### 3 Connecting the wiJAC2™ System



**Note:** The wiJAC2-T32 Wireless Intercom Dropcord System consists of one JB66-002 Headset Adapter and up to three JB67-002 Intercom Adapters. Only paired units will operate together (see [section 3.4.](#))

The JB67 Intercom Adapter is connected via an adapter cable (see [section 3.3.2.1](#)) into a jack in the aircraft where the headset dropcord is normally connected, and is then clipped to a suitable point in the aircraft.

A headset is inserted (via adapter cable CAB-HSET-0001 if required) into the jack on the JB66 Headset Adapter, which is clipped to the user's belt or clothing. **Headset and audio panel are not included.**




**WARNING:** JAC recommends that no battery-operated device should be relied upon as the sole method of communication in cases where there is potential risk to life or limb.





### 3.1 wiJAC2-T32 System connected to an aircraft audio system with ICS PTT

When connected to an aircraft audio system, the linked Headset Adapters are in an intercom loop which allows full duplex communication between the operators of each JB66. Each operator can listen to the aircraft audio system audio, and by pressing the JB66 TX PTT button can transmit to the aircraft audio system. When one JB66 is transmitting, all other JB66 mics will be muted, but the operators can hear the JB66 transmitted intercom audio.

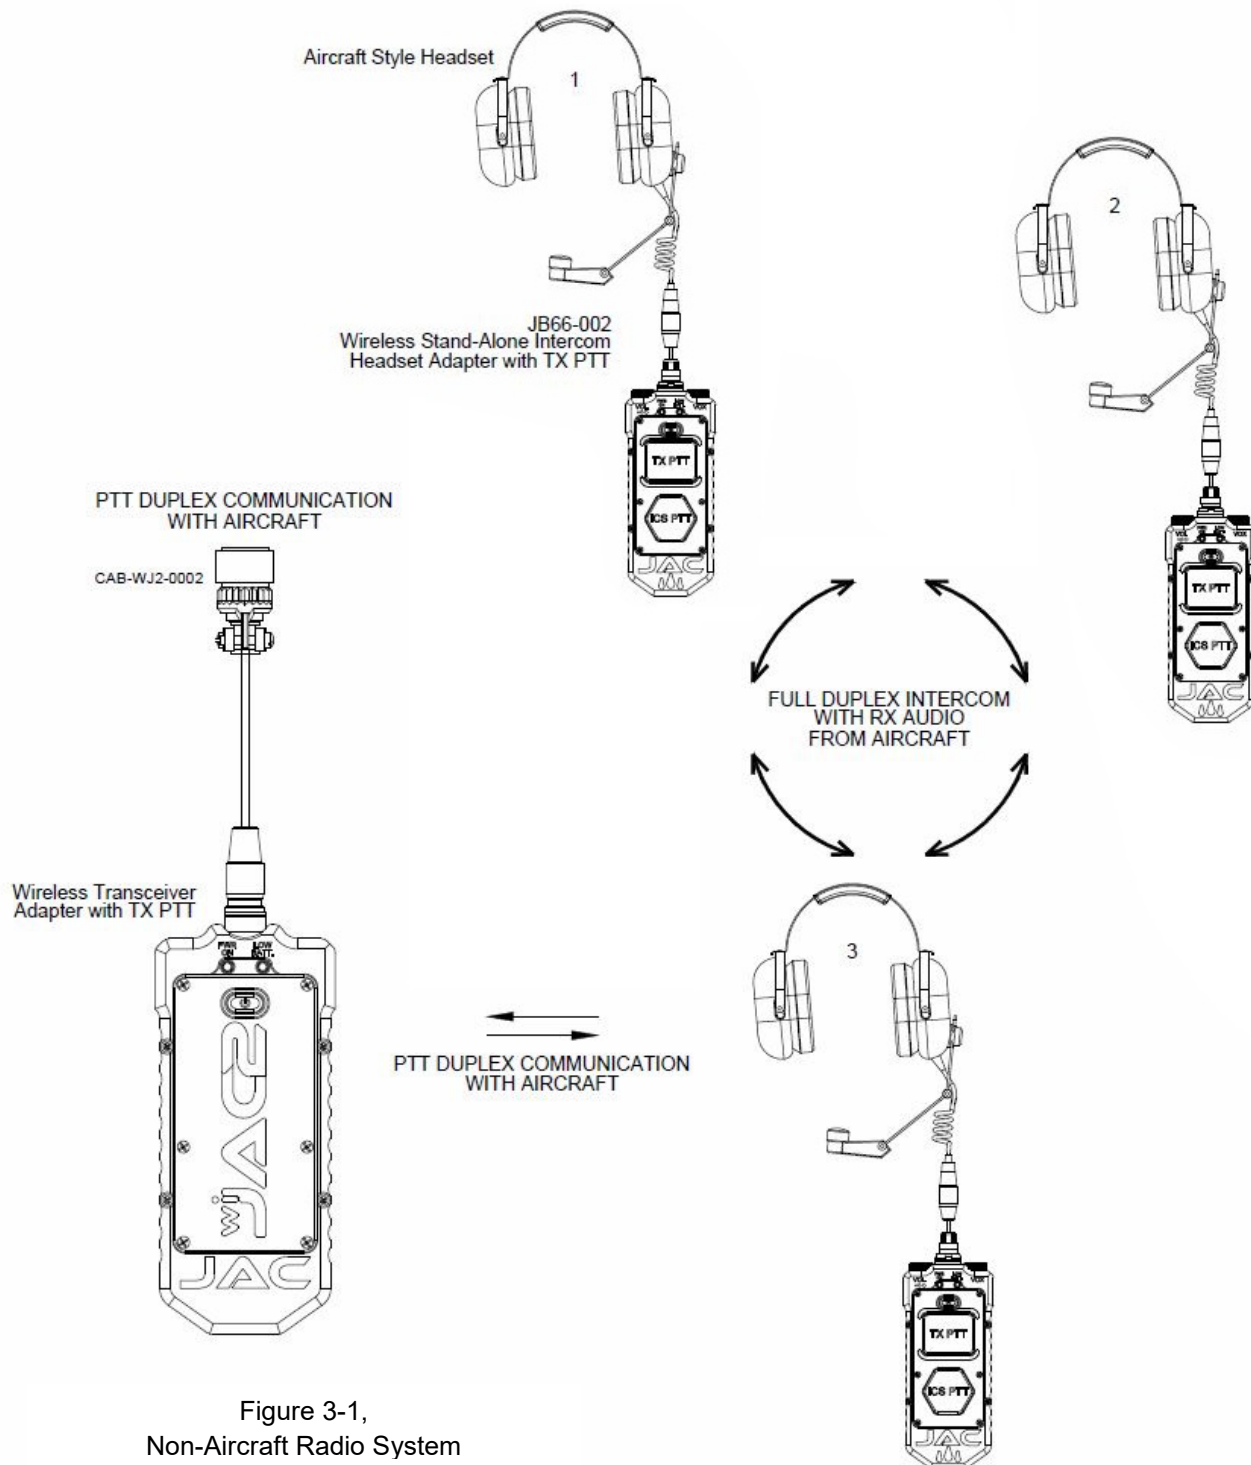



### 3.2 wiJAC2-T32 System connected to Aircraft Audio System with ICS VOX

When connected to an aircraft audio system, the linked Headset Adapters are in an intercom loop which allows full duplex communication between the operators of each JB66. Each operator hears the aircraft ICS audio, and by pressing the TX PTT button on a JB66, can route the mic audio to the aircraft audio system ICS. When one JB66 TX PTT button is pressed, all other JB66 mics will be muted, but the operators can listen to the conversation.

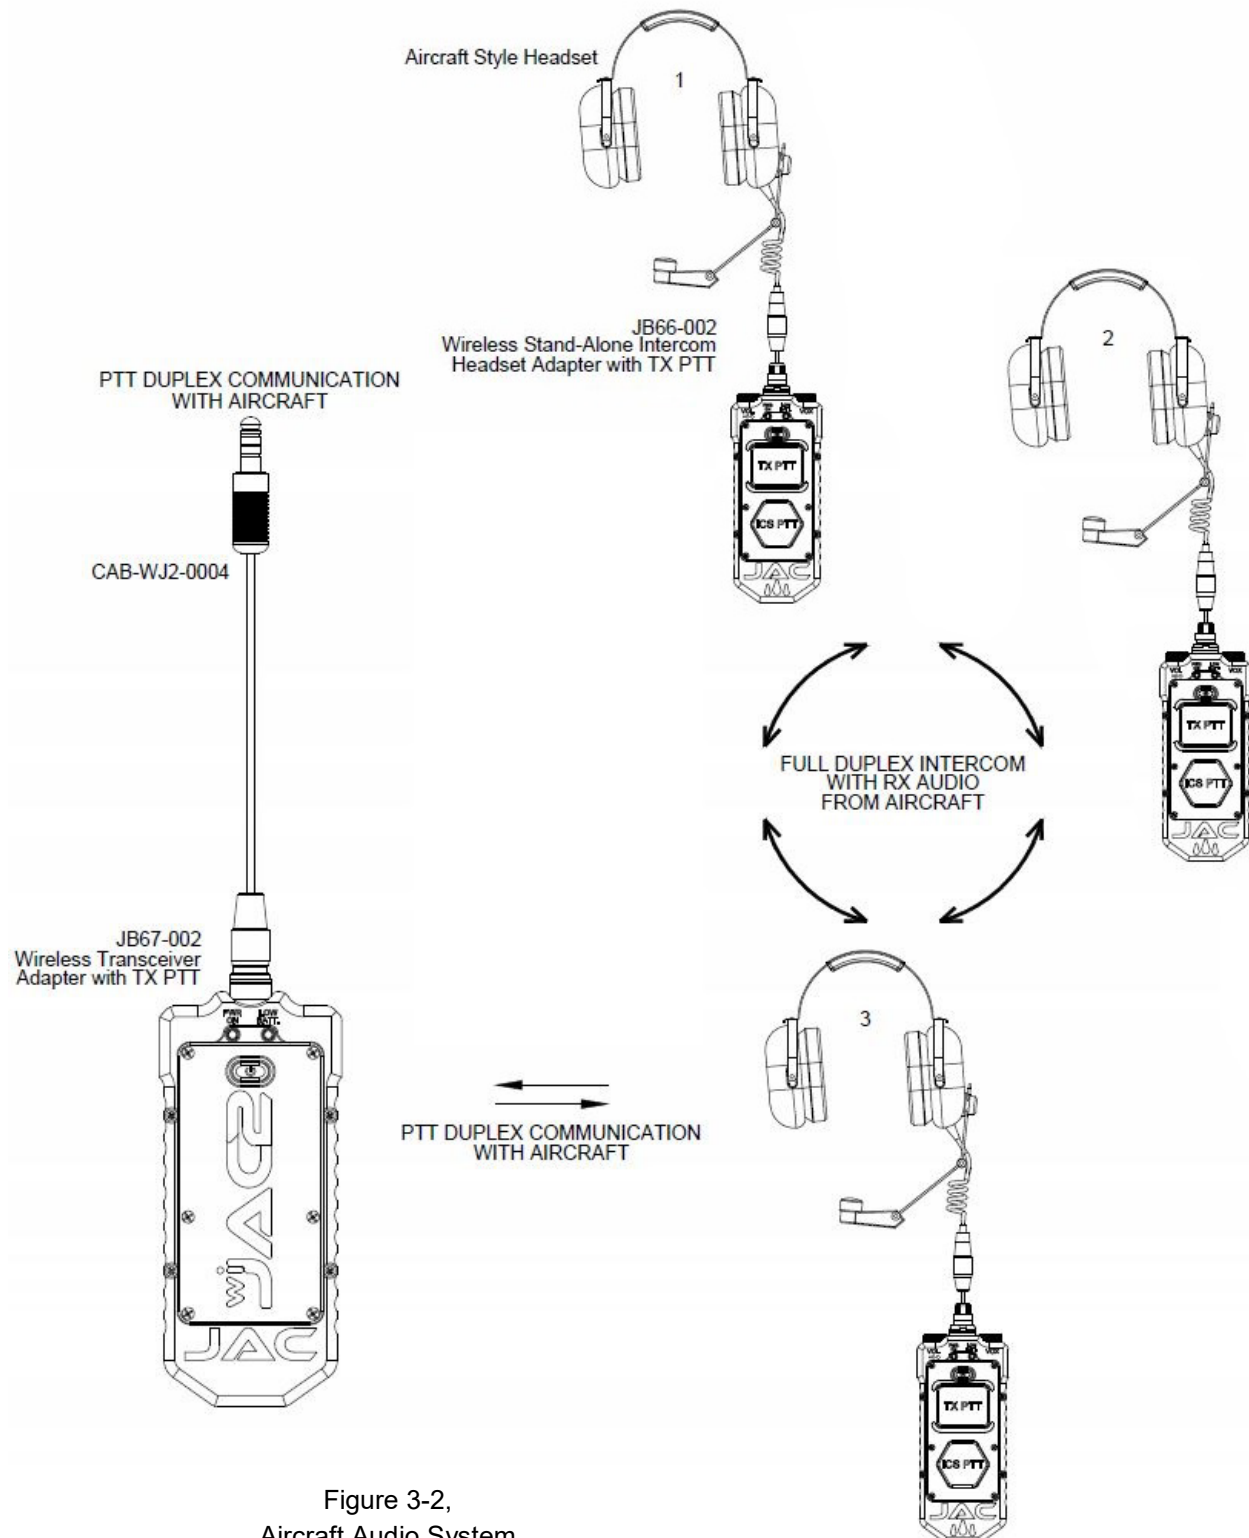


Figure 3-2,  
Aircraft Audio System



### **3.3 wiJAC2™ Set-up and Connection**

#### **3.3.1 Insert Batteries**

Ensure the batteries for both units are either **new** or **fully charged**, are installed in the battery compartment with the correct polarity, and that the battery lid is secured (see [section 2.4](#)).

#### **3.3.2 Attach Connectors to Aircraft and Headset**

Connect the JB67 Intercom Adapter jack (10-pin HR10A) to the audio panel jack connector (TJ-120 or equivalent) via an adapter cable (see [section 3.3.2.1](#)).

The JB66 Headset Adapter jack is a 6-pin female Lemo connector. A headset can be inserted directly into the JB66 (ANR direct), or via a headset adapter (CAB-HSET-0001 helicopter headset to 6 pin adapter, included).

##### **3.3.2.1 Adapter Cables**

The following adapter cables are available from Jupiter Avionics or through JAC dealers/distributors:

| <b>Description</b>  | <b>JAC Part #</b> |
|---|-------------------|
| JB67 - 10 pin Hirose plug to 6 pin MS plug – with TX & ICS key – MIC LO Ground  | CAB-WJ2-0002      |
| JB67 - 10 pin Hirose plug to 6 pin MS plug – with TX & ICS key – PHNS LO Ground | CAB-WJ2-0003      |
| JB67 - 10 pin Hirose plug to U174 Plug – 1.5ft Cord                             | CAB-WJ2-0004      |
| JB67 - 10 pin Hirose plug to 10 pin MS plug – with TX & ICS key – MIC LO Ground | CAB-WJ2-0006      |
| JB66 - GA to 6 pin Lemo   | CAB-HSET-0002     |

#### **3.3.3 Turn On Adapters and Verify Connection**

On the JB66 Headset Adapters, turn the VOL knob fully counterclockwise to minimum. Turn on the JB66 Headset Adapters and the JB67 Intercom Adapter. On both units the PWR ON and LOW BATT annunciators will illuminate for two seconds.

- When a unit is turned on, the PWR ON annunciator will illuminate for 2 seconds, and the unit will start to search for units it is paired with.
- While the unit is searching for its paired units, the PWR ON annunciators will triple-flash every 1.5 seconds.
- When the unit is connecting to its paired unit, the PWR ON annunciators will double-flash every 1.5 s until connection is established.
- After connection, the PWR ON annunciator will illuminate steady green until the unit is turned off.

#### **3.3.4 Verify Audio Operation**

Set the aircraft audio system's VOX mode to live or key the aircraft audio system's ICS PTT for the headset connection used by the JB67 Intercom Adapter.

Adjust the JB66 Headset Adapter's VOX control to fully counter-clockwise, then slightly clockwise to move it out of detent position. Adjust the VOL control to achieve a comfortable listening level. Confirm that the microphone audio is live - all microphone audio is heard in the phones. Confirm that the audio level increases as the VOL control is rotated clockwise and decreases as the VOL control is rotated counterclockwise.

Adjust the Headset Adapter's VOX control to fully clockwise and confirm that the microphone audio is off.

Press the Headset Adapter's ICS PTT button and confirm that microphone audio is heard in the phones.

Adjust the Headset Adapter's VOX control for a comfortable speaking level and return the aircraft audio system's controls to its previous settings.




## 3.4 wiJAC2™ Adjustments and Pairing



**CAUTION:** To prevent potential damage or loss of function, the internal adjustments, controls and CONFIG port should **only** be used by qualified technical personnel. Contact your installing agency for any required changes.

### 3.4.1 Pairing Process

The **wiJAC2-T32** Wireless Intercom System consists of one JB67 Intercom Adapter, and three factory-paired JB66 Headset Adapters.

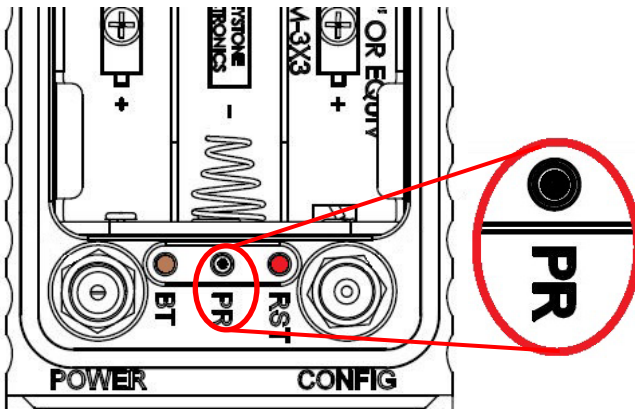

If either the JB67 or **any** of the JB66 units has been replaced, it will be necessary to re-pair **all** the units. This may also be necessary if either of the units has undergone maintenance.

To locate the pair switch, the battery cover must be removed from the unit.

When the battery cover is removed, the pair switch (PR) can be seen on the lower edge of the compartment.

The pairing process must be performed for each JB66 that is added to the system.

The JB66/JB67 pairing process is described in the following steps:

- 1. Turn off the JB67 and previously paired JB66.**
- 2. Turn on the JB67.**  
*The JB67 enters the standby mode (Power Annunciator blinks in sets of two or three flashes). If the Power Annunciator stays on continuously, the JB66 is still powered on and connected to the JB67. Turn off the JB66.*
- 3. On the JB67, press and hold the Pair Switch (4 seconds) until the Power and Low Battery Annunciators start flashing rapidly (10 flashes /second). Release the Pair switch.**  
*The JB67 enters the pairing mode (Power Annunciator is flashing at a medium rate (5 flashes /second) and can now be paired with the JB66.*
- 4. Turn on the JB66 to be paired with the JB67.**  
*The JB66 enters the standby mode (Power Annunciator blinks in sets of two or three flashes).*
- 5. On the JB66, press and hold the Pair Switch (4 seconds) until the Power and Low Battery Annunciators start flashing rapidly (10 flashes /second). Release the Pair switch.**  
*The JB66 enters the pairing mode (Power Annunciator is now flashing at a medium rate (5 flashes /second) and will complete the pairing process automatically with the JB67.*

The JB66 and JB67 indicate they have completed the pairing process when the Power Annunciators are on continuously.





### 3.4.2 Purging Process

Purging the JB67 Transceiver Adapter removes the pairings of all JB66 Headset Adapters.

The purging process is described in the following steps:

**1. Turn off the JB67 Transceiver Adapter and all other JB66 Headset Adapters previously paired with the JB67.**

**2. Turn on the JB67.**

*The JB67 enters the standby mode (Power Annunciator blinks in sets of two or three flashes). If the Power Annunciator stays on continuously, there is a JA66 still powered on and is connected to the JB67. Please turn off the JB66.*

**3. On the JB67-002, press and hold the Pair Switch (>4 seconds).**

**4. When the JB67 Power and Low Battery annunciators begin blinking rapidly, press the JB67 Power Button.**

**5. Release the Pair Switch and Power Button.**

*The JB67 enters the purge mode (Power Annunciator blinks in sets of three flashes). Wait for the JB67 to finish purging all paired JB66s from its memory (approximately 10 seconds).*

**6. Turn off the JB67.**

**7. Turn on the JB67. If the Power Annunciator blinks in sets of three flashes, the purging process was successful. If the Power Annunciator blinks in sets of two flashes, repeat the purging process from step 1.**



---

**Note:** To minimize the risk of system malfunction, do not attempt to pair a JB66 Headset Adapter with more than one JB67 Transceiver Adapter.

---



## **4 wiJAC2™ System Operation**

### **4.1 Overview**

When both units are turned on and connected, phones audio from the aircraft audio system is transmitted from the Intercom Adapter, received by the Headset Adapter and output on the headset's phones. Microphone audio from the headset's microphone is transmitted from the Headset Adapter, received by the Intercom Adapter and output to the aircraft's audio system.

#### **4.1.1 Listening Operation**

The Headset Adapter's Phones Volume (VOL) controls the level of audio heard in the headset's ear phones. As ambient noise levels change, the volume can be adjusted.

#### **4.1.2 VOX Speaking Operation**

To use the JB66 Headset Adapter hands-free, adjust the VOX control so that the microphone audio is turned on when speaking in to the headset's microphone at a comfortable level, or at a level to keep the ambient noise from turning on the microphone audio.

#### **4.1.3 ICS PTT Speaking Operation**

To use the JB66-002 Headset Adapter in high-noise environments, adjust the VOX control fully counter-clockwise until the knob clicks into detent position. To communicate, press and hold the JB66-002 Headset Adapter's ICS or TX PTT button and speak in to the headset's microphone.

#### **4.1.4 Live Speaking Operation**

To use the JB66-002 Headset Adapter so that the microphone audio is always turned on, adjust the VOX control fully counter-clockwise until the knob clicks into the detent position, then slightly clockwise until the knob clicks out of the detent.

#### **4.1.5 Low Battery Warning**

When the unit's battery charge is low, the LOW BATT annunciator will triple flash every 1.5 seconds. When the JB66 Headset Adapter battery charge is low, a triple-beep will be heard in the headset once every minute.



**Note:** JAC recommends that the batteries should be charged or replaced immediately when the LOW BATT warning illuminates during use.

When the battery charge level is critical, the unit will turn off. When one unit is off the other unit will begin searching for its paired unit and its PWR ON annunciator will flash.

#### **4.1.6 Operation during Charging**

The units will still operate while the Charging Port is connected to a USB power source, but the batteries will charge at a slower rate. Additional noise may be heard on the audio system while the Charging Port is connected to a USB power source.

#### **4.1.7 Loss of Audio**

If there is no audio heard in the headset, check the PWR ON annunciator on the JB66 Headset Adapter and the JB67 Intercom Adapter. If a unit is off, turn it on and verify connection and operation.

If the battery charge is low, replace or recharge the batteries or connect the headset directly to the aircraft audio system.



If audio is unintelligible, turn off and remove the JB66 Headset Adapter and the JB67 Intercom Adapter and connect the headset directly to the audio panel.

If another aircraft system is experiencing a fault, turn off and remove the JB66 Headset Adapter and the JB67 Intercom Adapter and connect the headset directly to the audio panel. Do not use the JB66 Headset Adapter and the JB67 Intercom Adapter if they appear to be the cause of the fault.

#### **4.1.8 Battery Life**

The operating duration of the **wiJAC2-T32** system with fully charged batteries before battery replacement is required depends on the following factors:

- **Distance between Headset Adapter and Intercom Adapter:**  
The closer together the units are the lower the radio frequency (RF) power required for connection. This will increase the battery life.
- **Obstacles between the Headset Adapter and Intercom Adapter (VOL):**  
Minimising the aircraft metal structures, human bodies, cargo and other obstacles between the units will reduce the RF power needed for connection and increase the battery life.
- **Charge capacity of the batteries installed:**  
The higher the capacity of the batteries, typically specified as 2000 to 2400 mAh (milliamp-hours), the longer the battery life.
- **The type of batteries installed and the operating temperature:**  
During low temperature operation, rechargeable batteries will lose capacity. When operating in low temperatures use alkaline batteries for a longer battery life.
- **The phones volume level and usage rate:**  
The lower the volume level and the less often audio is output to the phones, the longer the battery life.